


Troubleshooting – Waste Maid Disposer Jams.


- Make sure your disposer is turned off. Turn the isolator switch to off position or remove the electrical plug from your socket.
- Remove the black rubber Splashguard or the Batch Feed Stopper from the disposer throat.
- Look for any foreign items inside grind chamber.



- Check to see if both impellers are free.

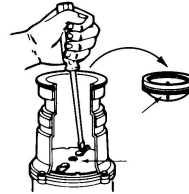

- Insert a medium flat -headed screwdriver into one of the two triangular holes cut into the turntable.

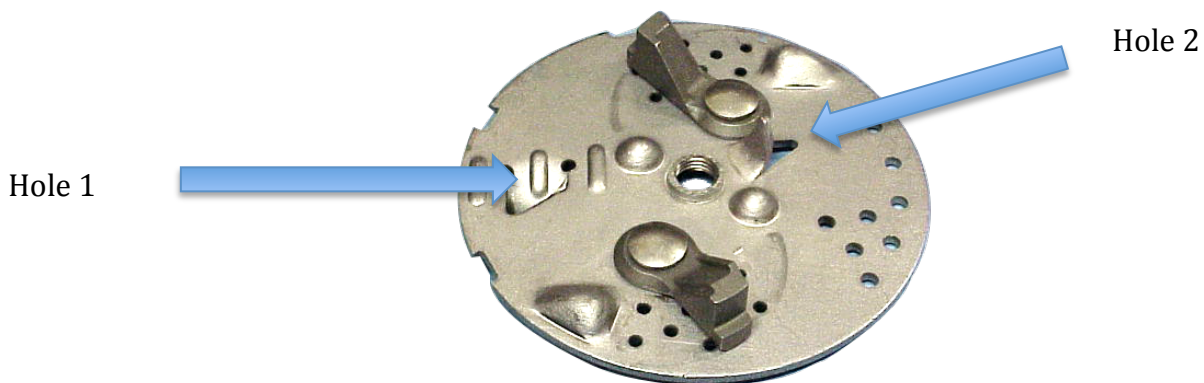

- Using the hole to anchor the screwdriver, push the turntable in anti-clockwise direction. Do this until the screwdriver can push the turntable 360 degrees.
- When the turntable is free, remove the screwdriver and your hand from inside the disposer.
- Replace the splashguard or batch feed stopper back into the throat of the machine.
- Press the red reset button situated on the lower shell.
- Replace the power plug back into the socket or turn the isolator switch back on.

For more troubleshooting information, please review www.wastemaid.co.uk

Bahn international can not held responsible for any damage or injury caused by following the information above.